
PUSH PENCILS



POCKET SIZE

- Remove the push button and eraser [in case of 0.5, 0.7 & 0.9] of the Special S Push Pencil. Insert new lead.
 - **1b** Remove the push button of the push pencil. Insert new lead.

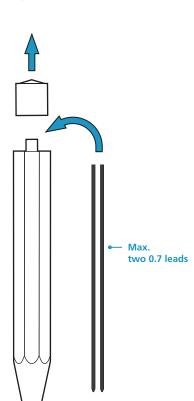

STANDARD SIZE

- 1 Remove the push button and the eraser of the push pencil.
- **2** Insert new lead.

