 


CLUTCH PENCILS

 
POCKET SIZE

- 1 Push the push button of the clutch pencil.



Do NOT remove the push button, product will be unusable.


- 2 Insert new lead.

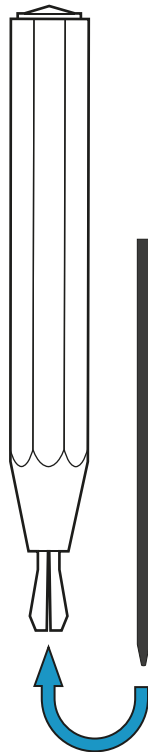

 WATCH VIDEO

SKETCH UP

 - 1 Push the push button of the clutch pencil.



- 2 Insert new lead.



- 3 To sharpen the lead, please remove it, screw out the push button and use its inside as sharpener.

